

**BASIC**

**MAINS POWERED**

**HIGH LEVEL  
ALARM**



**INSTALLATION INSTRUCTIONS**

## User Manual - Wireless Standalone Alarm.



### Coding of remote key fob and wireless float switch.

- The wireless float switch and key fob must be coded to the siren in order for the alarm to function properly.
- Insert the 23A - 12v battery into the wireless float switch by removing the rear cover.
- Plug in the siren power adaptor. Either via a USB socket or using the UK adaptor supplied.
- Press the 'set' button on the siren for about 1 second, until the siren bleeps and flashes ONCE, then instantly release the set button. The siren LED will flash rapidly.
- You now have 10 seconds between coding each component, or the siren will revert back to normal state.
- Activate the float switch and the siren will sound a long and short alert tone to indicate it has successfully received the signal.
- Within 10 seconds of pairing the float switch press the SOS button on the key fob to pair it to the siren. Again, the siren will sound a long and short alert tone.
- After 10 seconds have passed without receiving a wireless signal, the siren will automatically exit the set mode.

### Deleting all paired devices.

- Press and hold the 'set' button until the siren sounds 3 times, and the LED flashes rapidly, then release the set key.
- If the deletion was successful, the siren will sound one short tone and two long tones.

### Installation and Operation

- Before the float switch or siren are permanently installed, test that the wireless signal from the float switch can be detected by the siren. If not move the siren closer to the wireless float switch transmitter.
- It is possible to extend the distance of the wireless transmitter to move it closer to the siren by extending the cable between the float switch and transmitter.
- Once the final positions are identified, fix the siren to a wall using the siren locking ring back plate, and the float switch transmitter by using the self-adhesive pad.
- Connect the siren to a permanent mains AC supply, using the cables/adaptor supplied.
- Select the 'ON' switch on the siren to enable the internal backup battery.
- To activate the alarm on press the padlock 'LOCK' button on the key fob.
- To de-activate the alarm, press the padlock 'UNLOCK' button on the key fob.